

**PLEASE READ ALL INSTRUCTIONS BEFORE HANDLING POUCH**

**CAUTION RECOMMENDED DUE TO HOT TEMPERATURES AND SHARP TUBE/PIERCER**

**MISHANDLING EQUIPMENT OR FOOD PRODUCTS CAN LEAD TO SERIOUS INJURY OR DEATH**

**PERSONAL PROTECTIVE EQUIPMENT RECOMMENDED**

## POUCH HANDLING

- Unopened pouches may be stored at room temperature.
- Heat pouch in dispenser for a minimum of 4 hours or until product reaches 140°F before opening.
- The product in an opened pouch must be maintained at 140°F / 60°C minimum at all times.
- Shelf life of the product in an opened pouch is 5 days if maintained at 140°- 160°F / 60° - 71°C.
- Operators must follow GMPs and local food handling ordinances while handling the pouch and the tube and dispenser.

## POUCH PREPARATION

1. Wash your hands
2. Make sure area and machine are clean and sanitary.
3. Remove preheated pouch from dispenser upper warming tray.
4. Lift the ring and pull the dust cover from the fitment. ( Do not cut with a knife)
5. Remove tube/piercer assembly from plastic bag and insert piercer into fitment. **CAUTION, PIERCER END IS SHARP**
6. **Do not touch the part of the fitment that enters the pouch to avoid contamination.**
7. **Use the tube fitment to pierce the pouch.(Never use a dirty utensil to cut the pouch)**
8. Rotate piercer clockwise while pushing in so that the piercer punctures the seal membrane inside the fitment. **CAUTION, CHEESE SAUCE IS HOT!**
9. Grasp fitment firmly and thread piercer cap fully onto fitment.

Pouch Preparation # 2



Pouch Preparation #3 & #4



Pouch Preparation #5



Pouch Preparation #6




10. **DO NOT** insert piercer with the fitment lying flat on the table or with the pouch folded over behind the fitment. This may allow the piercer teeth to cut through the outer wall of the pouch
11. **Never leave a pouch in the dispenser unplugged.**


### POUCH LOADING

1. Open dispenser door and remove upper warming tray. **CAUTION, DISPENSER IS HOT!**
2. **Always use a new a New Tube for each pouch.**
3. Place preheated pouch in lower tray with pouch fitment protruding down through hole in front of tray. **CAUTION, CHEESE SAUCE IS HOT!**
4. Open tube clamp by rotating cam counterclockwise.
5. Guide tube through the pump slot from top to bottom.
6. Close the clamp by rotating the cam fully clockwise.
7. Place unopened pouch in upper warming tray to preheat and place tray in dispenser.
8. Close the door.


Pouch Loading #2 & #3

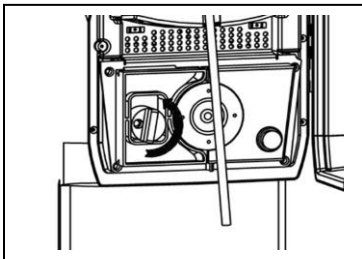

Pouch Loading #4

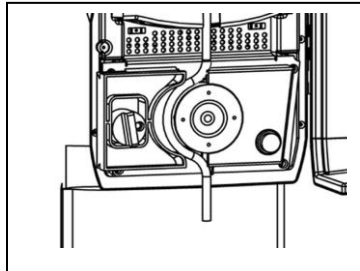

Pouch Loading #5

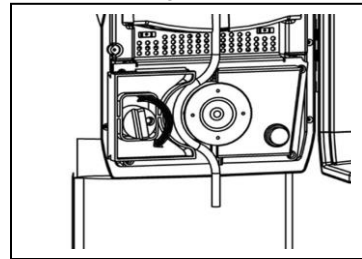

The vendor/ food service operator of this pouch product is responsible for maintaining the sanitary condition of the product and the dispensing machine.

It is strongly recommended that the vendor/ food service operator be familiar with and follow all Food Codes, including state and local Health Department regulations, to ensure the product remains safe for the consumer.